

LabVIEW™ Release Notes

LabVIEW 2011 Installation Guide

These release notes contain installation instructions for LabVIEW and system requirements for the LabVIEW software.

If you are upgrading from a previous version of LabVIEW, read the *LabVIEW Upgrade Notes* included with the upgrade package before you install LabVIEW 2011. You must consider several issues before you convert VIs for use in LabVIEW 2011.

Contents

Installing LabVIEW 2011	2
Windows.....	2
Mac OS X	5
Linux.....	7
Installing LabVIEW Add-Ons.....	9
Activating the LabVIEW License (Windows)	9
Evaluating LabVIEW, Modules, or Toolkits.....	10
Single-Seat and Volume Licensing	11
Installing and Configuring Hardware	11
Windows.....	11
Mac OS X	11
Linux.....	12
Where to Go from Here	12

Installing LabVIEW 2011

This section contains the system requirements and installation instructions for specific operating systems. Read the system requirements for your operating system before installing LabVIEW.

Refer to the National Instruments Web site at ni.com/support if you encounter errors during installation.

Windows

Table 1 describes the system requirements you need to run LabVIEW 2011 on Windows.

Table 1. Windows System Requirements

Windows	Run-Time Engine	Development Environment
Processor	Pentium III/Celeron 866 MHz or equivalent	Pentium 4/M or equivalent
RAM	256 MB	1 GB
Screen Resolution	1024 × 768 pixels	1024 × 768 pixels
Operating System	Windows 7/Vista/XP SP2/ Windows Server 2003 R2 (32-bit)/ Windows Server 2008 R2 (64-bit)	Windows 7/Vista/XP SP2/ Windows Server 2003 R2 (32-bit)/ Windows Server 2008 R2 (64-bit)
Disk Space	340 MB	3.3 GB (includes default drivers from the NI Device Drivers DVD)
Color palette	N/A	LabVIEW and the <i>LabVIEW Help</i> contain 16-bit color graphics. LabVIEW requires a minimum color palette setting of 16-bit color.
Temporary Files Directory	N/A	LabVIEW uses a directory for storing temporary files. National Instruments recommends that you have several megabytes of disk space available for this temporary directory.
Adobe Reader	N/A	You must have Adobe Reader installed to search PDF versions of all LabVIEW manuals.
Note: The following list describes restrictions for using LabVIEW on Windows. <ul style="list-style-type: none">• LabVIEW does not support Windows 2000/NT/Me/98/95 or Windows XP x64.• A user cannot access LabVIEW using a Guest account on Windows.		

The LabVIEW Platform DVDs include LabVIEW and the following modules and toolkits.

Data Management and Reporting

- Database Connectivity Toolkit
- DataFinder Toolkit
- Internet Toolkit
- Report Generation Toolkit for Microsoft Office

Embedded (Mobile and Robotics)

- Mobile Module
- Robotics Module

FPGA

- Compilation Tools for FPGA Devices other than Virtex-II
- Compilation Tools for Virtex-II FPGA Devices
- FPGA Compile Farm Toolkit
- FPGA Module

Image Acquisition and Image Processing

- Vision Development Module

Industrial Monitoring

- Datalogging and Supervisory Control Module
- Touch Panel Module

Interactive Datalogging and Measurements

- LabVIEW SignalExpress

Motion Control

- NI Motion Assistant
- NI SoftMotion Module

Real-Time

- Real-Time Execution Trace Toolkit
- Real-Time Module

Signal Processing, Analysis, and Math

- Adaptive Filter Toolkit
- Advanced Signal Processing Toolkit
- Digital Filter Design Toolkit
- Jitter Analysis Toolkit
- MathScript RT Module
- Sound and Vibration Measurement Suite

Simulation and Control

- Control Design and Simulation Module
- PID and Fuzzy Logic Toolkit
- Simulation Interface Toolkit
- System Identification Toolkit

Software Development and Deployment

- Desktop Execution Trace Toolkit
- Statechart Module
- Unit Test Framework Toolkit
- VI Analyzer Toolkit



Note National Instruments has recently announced discontinued production and support for the Mobile Module Deployment Option add-on. The last version of LabVIEW that will include the Mobile Module Deployment Option is LabVIEW 2011. For existing users of the Mobile Module, National Instruments will continue to offer extended support for this module according to the guidelines found in the NI LabVIEW Lifecycle Policy at ni.com/labview/product-lifecycle.

If you purchased any of these add-ons, you can install them using the LabVIEW Platform DVDs. To evaluate any of these add-ons before purchasing them, you can install these add-ons from the LabVIEW Platform DVDs and try them for free for 30 days.

Complete the following steps to install LabVIEW for Windows.

1. Log on as an administrator or as a user with administrator privileges.
2. Disable any automatic virus detection programs before you install. Some virus detection programs interfere with installation.
3. Insert the LabVIEW Platform DVD 1.



Note If you purchased your product with an NI Software Suite or NI Product Bundle, use the installation media that shipped with your purchase to install the product.

4. Follow the instructions on the screen to install and activate LabVIEW and any module or toolkit.



Note Some LabVIEW products have additional system requirements. As you select each product in the **Product List**, verify that the computer on which you are installing meets any additional requirements listed in the description field at the bottom of the window.

5. (Optional) Follow the instructions on the screen to install device drivers for National Instruments products. Refer to the [Installing and Configuring Hardware](#) section of this document for more information.
6. (Optional) Install any LabVIEW add-ons not found on the LabVIEW Platform DVDs. Refer to the [Installing LabVIEW Add-Ons](#) section of this document for more information.



Note Use the Application Builder to create and deploy stand-alone applications developed in LabVIEW. LabVIEW installs the Application Builder when you install LabVIEW. If you activate the LabVIEW Professional Development System, you automatically activate the Application Builder. If you activate the LabVIEW Base Package or Full Development System, you must purchase and activate the Application Builder separately. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `exd8yy` to access the Upgrade Advisor and purchase the Application Builder.

7. After installation, enable any virus detection programs you disabled.
8. (Optional) Install and configure National Instruments hardware. Refer to the [Installing and Configuring Hardware](#) section of this document for more information.
9. Refer to the [Where to Go from Here](#) section of this document for more information about getting started with and using LabVIEW.



Note If you use Windows Vista or Windows XP, a **Security Alert** dialog box appears when you launch LabVIEW or the NI Example Finder for the first time. If you select the **Keep blocking this program** option, the LabVIEW VI Server, LabVIEW Web Server, and any server written in LabVIEW cannot accept incoming connections from a remote computer. Select the **Unblock this program, despite the security risk** option to configure your computer to launch LabVIEW without any changes in functionality. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `expm69` for more information about correcting this problem.

To modify the current LabVIEW installation or to uninstall LabVIEW 2011, select **National Instruments Software** in the Programs applet in the Control Panel. When you modify the installation, a list of National Instruments software appears. Select a product in the list to add or

remove individual components or to uninstall the product. Select multiple products to remove by pressing the <Shift> or <Ctrl> key while you select them.

Mac OS X

Table 2 describes the system requirements you need to run LabVIEW 2011 on Mac OS X.

Table 2. Mac OS X System Requirements

Mac OS X	Run-Time Engine	Development Environment
Processor	Intel-based processor	Intel-based processor
RAM	256 MB	1 GB
Screen Resolution	1024 × 768 pixels	1024 × 768 pixels
Operating System	Mac OS X 10.5 or 10.6	Mac OS X 10.5 or 10.6
Disk Space	563 MB	1.2 GB for the complete installation (excluding drivers)
Color palette	N/A	LabVIEW and the <i>LabVIEW Help</i> contain 16-bit color graphics. LabVIEW requires a minimum color palette setting of 16-bit color.
Temporary Files Directory	N/A	LabVIEW uses a directory for storing temporary files. National Instruments recommends that you have several megabytes of disk space available for this temporary directory.
Adobe Reader	N/A	You must have Adobe Reader installed to search PDF versions of all LabVIEW manuals.
Note: National Instruments recommends that you use Firefox 1.0.2 or later or Safari 1.3.2 or later to view the <i>LabVIEW Help</i> .		

Complete the following steps to install LabVIEW for Mac OS X.

1. Disable any automatic virus detection programs before you install. Some virus detection programs interfere with the installation program.
2. Insert the LabVIEW 2011 installation media.

3. Run the appropriate installation program.

The following types of installations of LabVIEW 2011 are available:

- **Easy Install**—Installs all LabVIEW 2011 files, including LabVIEW, NI-488.2 drivers, and NI-VISA drivers. This is the default installation for LabVIEW.
- **Custom Install**—If you select this option, you select the files to install. To select a custom installation, click the **Customize** button on the **Installation Type** page. You must select the **LabVIEW 2011** component to install the core set of LabVIEW files necessary for running LabVIEW 2011.

4. Follow the instructions that appear on the screen.
5. After installation, enable any virus detection programs you disabled.
6. (Optional) Install LabVIEW add-ons. Refer to the [Installing LabVIEW Add-Ons](#) section of this document for more information.



Note Use the NI LabVIEW Application Builder to create and deploy stand-alone applications developed in LabVIEW. LabVIEW installs the Application Builder when you install the LabVIEW Professional Development System. If you install the LabVIEW Full Development System, you must purchase the Application Builder separately. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `exd8yy` to access the Upgrade Advisor and purchase the Application Builder.

7. (Optional) Install and configure National Instruments hardware. Refer to the [Installing and Configuring Hardware](#) section of this document for more information.
8. Refer to the [Where to Go from Here](#) section of this document for more information about getting started with and using LabVIEW.

You cannot install LabVIEW into a non-default location, but you can move the LabVIEW 2011 directory after you install. If you move the LabVIEW 2011 directory to a non-default location, LabVIEW does not uninstall and remove the directory unless you move the LabVIEW 2011 directory back to the default location.

To uninstall LabVIEW 2011, run the `Uninstall.sh` shell script file on the installation media from a Terminal shell. The script prompts you to remove the files necessary to uninstall LabVIEW. To keep any files you modified or added to the LabVIEW 2011 directory, save those files in another location before uninstalling LabVIEW 2011.

Linux

Table 3 describes the system requirements you need to run LabVIEW 2011 on Linux.

Table 3. Linux OS System Requirements

Linux OS	Run-Time Engine	Development Environment
Processor	Pentium III/Celeron 866 MHz or equivalent	Pentium 4/M or equivalent
RAM	256 MB	1 GB
Screen Resolution	1024 × 768 pixels	1024 × 768 pixels
Operating System	Linux kernel 2.2x, 2.4x, or 2.6x, and GNU C Library (glibc) Version 2.2.4 or later for the Intel x86 architecture	Red Hat Enterprise Linux Desktop + Workstation 5 or later, open SUSE 11.2 or later, or Scientific Linux 6 or later
Disk Space	125 MB	1.2 GB for the complete installation (excluding drivers)
Color palette	N/A	LabVIEW and the <i>LabVIEW Help</i> contain 16-bit color graphics. LabVIEW requires a minimum color palette setting of 16-bit color.
Temporary Files Directory	N/A	LabVIEW uses a directory for storing temporary files. National Instruments recommends that you have several megabytes of disk space available for this temporary directory.
Adobe Reader	N/A	You must have Adobe Reader installed to search PDF versions of all LabVIEW manuals.
Note: National Instruments recommends that you use Firefox 1.0.2 or later or Mozilla 1.2 or later to view the <i>LabVIEW Help</i> .		

Complete the following steps to install LabVIEW for Linux.

1. Log into the system as `root`.
2. Insert the LabVIEW 2011 installation media. Use `mount /mnt/cdrom` to mount the media. On some systems, the media mounts automatically.
3. To change the current directory to the mounted media, enter the following command:
`cd /mnt/cdrom`

4. To run the installation script, enter the following command:

```
sh ./INSTALL
```

5. (Optional) Install LabVIEW add-ons. Refer to the [Installing LabVIEW Add-Ons](#) section of this document for more information.



Note Use the NI LabVIEW Application Builder to create and deploy stand-alone applications developed in LabVIEW. LabVIEW installs the Application Builder when you install the LabVIEW Professional Development System. If you install the LabVIEW Full Development System, you must purchase the Application Builder separately. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `exd8yy` to access the Upgrade Advisor and purchase the Application Builder.

6. (Optional) Install and configure National Instruments hardware. Refer to the [Installing and Configuring Hardware](#) section of this document for more information.
7. Refer to the [Where to Go from Here](#) section of this document for more information about getting started with and using LabVIEW.



Note The format of the Academic Site License installation media for Mac OS X and Linux is Mac Extended HFS+. If you are unable to mount the Academic Site License installation media on a Linux system, use one of the following commands:

```
mount -t hfsplus /dev/scd0 /mnt/cdrom
```

```
mount -t hfsplus /dev/scd0 /media/cdrom
```

The `INSTALL` script installs LabVIEW in the `/usr/local` directory. The script also optionally runs the installation scripts for the NI-VISA and NI-488.2 drivers. The `INSTALL` script uses `rpm` to install on systems that support the `.rpm` format or to extract the `rpm` archives directly on other systems. You also can install the files manually by using `rpm`—or a GUI `rpm`-based install tool—on Red Hat or other `rpm`-based systems or on systems without `rpm` by using the utilities in the `bin` directory on the LabVIEW installation media.

If you installed Netscape, Mozilla, or Firefox in the default location, the LabVIEW installation program automatically installs the browser plug-in so you can view and control front panels remotely using a Web browser. Otherwise, you can install the browser plug-in manually by installing the LabVIEW Run-Time Engine and then copying `/usr/local/lib/LabVIEW-2011/LV2011NPlugin.so` to the browser plug-in directory such as `/usr/lib/netscape/plugins`, `/usr/lib/mozilla/plugins`, or `/usr/lib/firefox/plugins`.

Refer to the `README.html` or `README.txt` documents in `/mnt/cdrom` for custom installation instructions and other information.

Common LabVIEW Launch Errors on Linux

The following table lists common errors that might occur when you launch LabVIEW for Linux.

Error	Possible Cause and Solution
Xlib: connection to :0.0 refused by server	<p>Possible Cause—You are trying to run LabVIEW as a user who does not have permission to open a window on the display server. You typically receive these errors after you run the <code>su</code> command to temporarily become a different user, such as <code>root</code> (superuser).</p> <p>Solution—Exit the <code>su</code> command and launch LabVIEW as the login user or use the <code>xhost</code> or <code>xauth</code> commands to grant permission to open a window on the display server.</p>
client is not authorized to connect to server	
internal error during connection authorization check	

Refer to the National Instruments Web site at ni.com/support for information about other errors that might occur when you launch LabVIEW for Linux.

Installing LabVIEW Add-Ons

Some versions of toolkits that are not found on the LabVIEW Platform DVDs do not work with LabVIEW 2011. Installing an incompatible toolkit might cause some features in the toolkit or LabVIEW to behave incorrectly. Installing modules and toolkits from the LabVIEW 2011 Platform DVDs ensures compatibility with LabVIEW 2011. Use the instructions in this section only to install add-ons not available on the LabVIEW Platform DVDs.

Complete the following steps to install LabVIEW add-ons.

1. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `compat` to determine whether your LabVIEW add-on is compatible with the current version of LabVIEW.
2. Disable any automatic virus detection programs before you install. Some virus detection programs interfere with the installation program.
3. Insert the LabVIEW add-on installation media and follow the instructions that appear on the screen.
4. After installation, enable any virus detection programs you disabled.

Refer to the National Instruments Web site at ni.com/labview/family for more information about National Instruments add-ons.

Activating the LabVIEW License (Windows)



Note (Mac OS X and Linux) LabVIEW does not require activation.

National Instruments uses activation to better support evaluation of our software, to enable additional software features, and to support license management in large organizations. To find

out more about National Instruments software licensing, visit the National Instruments Web site at ni.com/license to find frequently asked questions, resources, and technical support.

You can activate licenses you have purchased for LabVIEW, modules, and toolkits during installation. If you do not activate a valid license for LabVIEW or any modules or toolkits that you install, the unlicensed product operates in evaluation mode. After you install the product, the evaluation begins the first time you launch the product and lasts 30 consecutive days. When the evaluation period expires, you must activate a valid license to continue using the product.

To activate the product license, use the serial number you received on the Certificate of Ownership included in the software kit. If your software kit does not include a Certificate of Ownership, you can find the serial number on the product packing slip or on the shipping label. If you have purchased the version of a product you want to activate, you also can use serial numbers from a previous version of the product to activate it. You can activate the LabVIEW license in any of the following ways:

- During installation, enter the serial number when prompted and complete the installation and activation process.
- After you launch LabVIEW in evaluation mode, click the **Activate Products** button in the **LabVIEW** dialog box.
- Select **Help»Activate LabVIEW Components** while LabVIEW is running in evaluation mode or select **Start»All Programs»National Instruments»NI License Manager** to launch NI License Manager. The license activation does not take effect until you restart LabVIEW.

If you do not activate LabVIEW, modules, or toolkits during installation, LabVIEW prompts you to activate when you launch LabVIEW.

Evaluating LabVIEW, Modules, or Toolkits

You can access all the tools, VIs and functions, help, and examples available to the LabVIEW Professional Development System and most modules or toolkits in a free 30-day evaluation mode.

After the evaluation period for a module or toolkit expires, you are no longer able to perform the following actions:

- Run VIs from the module or toolkit.
- Run VIs that use VIs from the module or toolkit.
- Build VIs that use VIs from the module or toolkit into an executable or shared library.
- Access menus, tools, or palettes installed by the module or toolkit.

When you install a module or toolkit for evaluation, you install the help for the module or toolkit. The help for the module or toolkit remains installed after the 30-day evaluation period. Also, the NI Example Finder displays all module or toolkit examples after the 30-day evaluation period. You must uninstall the module or toolkit to remove the help and examples.

If you run LabVIEW in evaluation mode, you receive functionality of the Professional Development System. If you then purchase and activate a LabVIEW license, you receive full

functionality of the development system you purchase. For example, if you create a VI using features that are available only in the Professional Development System and then you purchase and activate the Full Development System, the VI you created using the Professional Development System will be broken.

Single-Seat and Volume Licensing

LabVIEW supports both single-seat and volume licenses. Single-seat licensing is the use of LabVIEW by an individual user. Single-seat licenses may be used on one computer by many users or by one user on up to three computers. Volume licensing is available if you purchase five or more seats of the same product and requires a volume licensing agreement and additional volume licensing software. Each seat using LabVIEW must have a valid license from a license server. Refer to the National Instruments Web site at ni.com/license for more information about single-seat and volume licensing.

Installing and Configuring Hardware

After you install LabVIEW software, install the drivers you need to use National Instruments hardware. All National Instruments devices include the drivers you need to use the device. The drivers packaged with LabVIEW and those packaged with the devices might be different versions. LabVIEW works best with the latest available drivers that support the devices in your system. If you are using NI-DAQ 7.0 or later, refer to the *NI-DAQ Readme* for more information about which driver version to use with the DAQ devices in your system.



Note National Instruments periodically updates device drivers. Refer to the National Instruments Web site at ni.com/info and enter the Info Code `exyckh` to download the latest drivers.

Install and configure National Instruments hardware after you install the drivers for those devices.

Windows

The NI Device Drivers media includes the drivers and other software you need to use all National Instruments hardware. Use MAX to confirm that LabVIEW recognizes the device, to configure accessories and device settings, and to run test panels to test device functionality, such as the ability to acquire and generate signals. Launch MAX by selecting **Start»All Programs»National Instruments»Measurement & Automation** or by double-clicking the **Measurement & Automation** icon on the desktop.

Refer to the installation instructions packaged with your device to install and configure your National Instruments device.

Mac OS X

The LabVIEW installation program installs the NI-VISA driver and the NI-488.2 driver for the GPIB interface by default.



Note (Mac OS X) LabVIEW does not currently support the full NI-DAQmx driver software. NI-DAQmx Base offers a subset of NI-DAQmx functionality on Mac OS X. Refer to the National Instruments Web Site at ni.com/info and enter the Info Code `exf8fb` to download NI-DAQmx Base.

Linux

The LabVIEW installation program prompts you to choose the NI-VISA and NI-488.2 drivers for the GPIB interface you are using. After you make a selection, LabVIEW installs those drivers automatically.



Note LabVIEW does not support the GPIB-1014 series (VME) devices or the original GPIB-SCSI. LabVIEW does support the GPIB-SCSI-A.

NI-DAQmx for Linux supports several National Instruments PXI, PCI, and SCXI DAQ devices. Refer to the *NI-DAQmx Readme for Linux* for a complete list of supported devices. After you install the NI-DAQmx for Linux driver, refer to the *NI-DAQmx for Linux Configuration Guide* at `/usr/local/natinst/nidaqmx/docs/ConfigurationGuide.html` for information about testing and configuring a National Instruments DAQ device.

NI-DAQmx Base for Linux supports several National Instruments USB DAQ devices. Refer to the *Readme for NI-DAQmx Base* for a complete list of supported devices. Driver documentation installs in the `/usr/local/natinst/nidaqmxbase/documentation` directory. Refer to the *LabVIEW Help* for more information about NI-DAQmx Base.

Where to Go from Here

Refer to the following resources after you install LabVIEW.

- For new LabVIEW users, refer to the *Getting Started with LabVIEW* manual to familiarize yourself with the LabVIEW environment.
- Refer to the *LabVIEW Help* for more information about LabVIEW programming concepts, step-by-step procedures, and reference information about LabVIEW VIs, functions, palettes, menus, and tools.
- Refer to ni.com/labview/community for Web resources that include example VIs and discussion forums.

LabVIEW, National Instruments, NI, ni.com, the National Instruments corporate logo, and the Eagle logo are trademarks of National Instruments Corporation. Refer to the *Trademark Information* at ni.com/trademarks for other National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patents Notice* at ni.com/patents. Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data.

© 1998–2011 National Instruments Corporation. All rights reserved.