 


## GETTING STARTED GUIDE

# NI REM-11190

Bus Power Module for Remote I/O

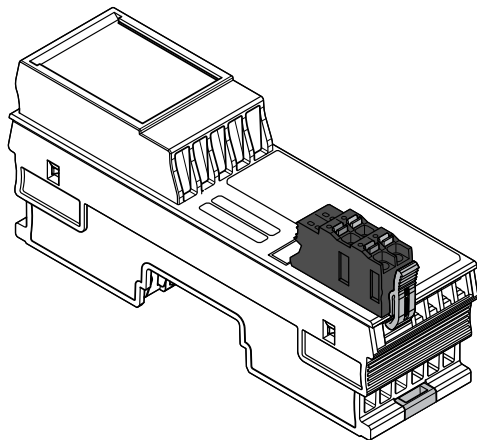

This document explains how to connect to the REM-11190.



**Note** The guidelines in this document are specific to the REM-11190. The other components in the system might not meet the same safety ratings. Refer to the documentation for each component in the system to determine the safety and EMC ratings for the entire system.



**Caution** Do not operate the REM-11190 in a manner not specified in this document. Product misuse can result in a hazard. You can compromise the safety protection built into the product if the product is damaged in any way. If the product is damaged, return it to NI for repair.

# Isolation Withstand Voltages

Test section	Test voltage
5 V communications power (logic), 24 V supply (I/O)	500 VAC, 50 Hz, 1 min.
5 V supply (logic)/functional earth ground	500 VAC, 50 Hz, 1 min.
24 V supply (I/O)/functional earth ground	500 VAC, 50 Hz, 1 min.

## Electromagnetic Compatibility Guidelines

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) stated in the product specifications. These requirements and limits provide reasonable protection against harmful interference when the product is operated in the intended operational electromagnetic environment.

This product is intended for use in industrial locations. However, harmful interference may occur in some installations, when the product is connected to a peripheral device or test object, or if the product is used in residential or commercial areas. To minimize interference with radio and television reception and prevent unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any changes or modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.

## Preparing the Environment

Ensure that the environment in which you are using the REM-11190 meets the following specifications.

Operating temperature	-25 °C to 60 °C
Operating humidity	5% RH to 95% RH, noncondensing
Pollution Degree	2
Maximum altitude	3,000 m

Indoor use only.



**Note** Refer to the device datasheet on [ni.com/manuals](https://ni.com/manuals) for complete specifications.


# Verifying the Kit Contents

---

Verify that the following items are included in the REM-11190 kit.

**Figure 1.** REM-11190 Kit Contents

 ---

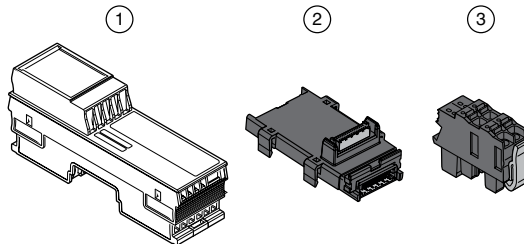

- 
1. NI REM-11190
  2. Red Bus connector
  3. Supply voltage connector
- 

## Unpacking the Kit

---



**Caution** To prevent electrostatic discharge (ESD) from damaging the device, ground yourself using a grounding strap or by holding a grounded object, such as your computer chassis.

1. Touch the antistatic package to a metal part of the computer chassis.
2. Remove the device from the package and inspect the device for loose components or any other sign of damage.



**Caution** Never touch the exposed pins of connectors.




**Note** Do not install a device if it appears damaged in any way.

3. Unpack any other items and documentation from the kit.

Store the device in the antistatic package when the device is not in use.

# Installing the REM-11190

 **Figure 2.** Structure of the REM-11190

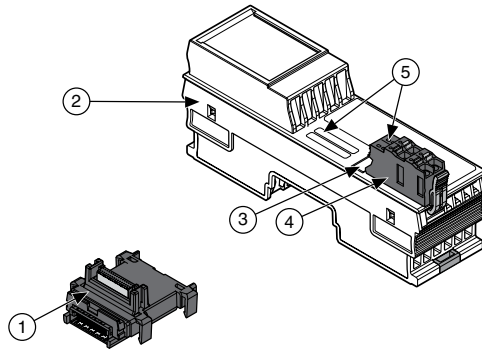

- 1. Bus connector
- 2. REM-11190
- 3. Module function label
- 4. Supply voltage connector
- 5. LED indicators

**Table 1.** Module Function Labels

Label Color	Module Function
Blue	Digital input
Red	Digital output
Green	Analog input, thermocouple
Yellow	Analog output
White	Bus coupler, power module


## Installing Bus Connectors
 
### What to Use

- Bus connector
- DIN rail

### What to Do

Complete the following steps to install bus connectors on the DIN rail.

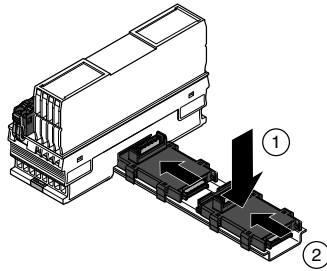

1. Insert the bus connector for the REM-11190 into the DIN rail.



**Note** Verify that you are using the red bus connector. The REM-11190 will not function if you mount it on any other bus connector.

2. Slide the bus connector along the DIN rail until it connects to the preceding bus connector.



**Note** A bus connector will not attach to a preceding bus connector with a mounted module. Remove the preceding module before installing additional bus connectors.

3. Repeat Steps 2 and 3 for additional bus connectors.


## Installing the Module
 
### What to Use

- REM-11190
- Mounted bus connector

### What to Do

Complete the following steps to install the REM-11190 on the DIN rail.

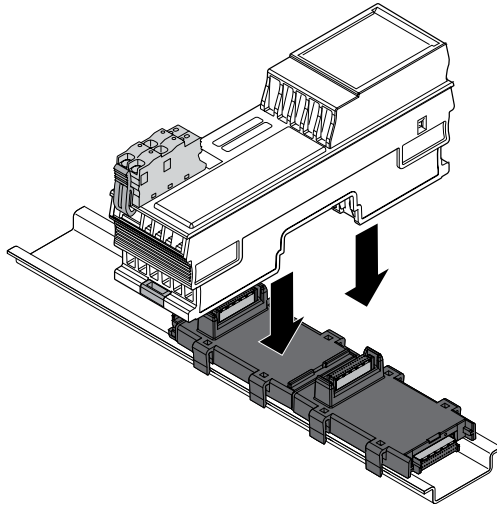

1. Align the REM-11190 over the appropriate bus connector.



**Note** Verify that the bus connector socket aligns with the socket on the underside of the module.

2. Press the REM-11190 directly onto the bus connector and DIN rail until it clicks into place.



**Caution** Tilting the module when mounting it on the DIN rail will damage the contacts.


## Installing Spring-Terminal Blocks
 
### What to Use


- REM-11190
- Spring-terminal block

### What to Do

Align the spring-terminal block over the REM-11190 and press until it clicks into place.

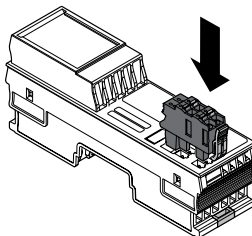


# REM-11190 Pinout

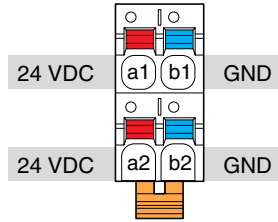 

**Table 2. REM-11190 Signal Descriptions**

Signal	Color	Description	
a1, a2	Red	24 VDC ( $U_L$ )	Supply of logic voltage (internally jumpered)
b1, b2	Blue	GND	Reference potential of the supply voltage (internally jumpered)


**Figure 3. REM-11190 LEDs**

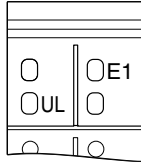 

**Table 3. LED Indicators**

LED	LED Color	LED Pattern	Indication
UL	Green	Solid	Communications power $U_{Bus}$ is present.
	Red	Solid	<ul style="list-style-type: none"> <li>Communications power <math>U_{Bus}</math> is not present.</li> <li>Communications power <math>U_{Bus}</math> downstream of the power module is not present.</li> </ul>
	—	Off	Communications power supply not present.
E1	Red	Solid	Module mounted on incorrect bus connector
	—	Off	No error
 
# Connecting the REM-11190

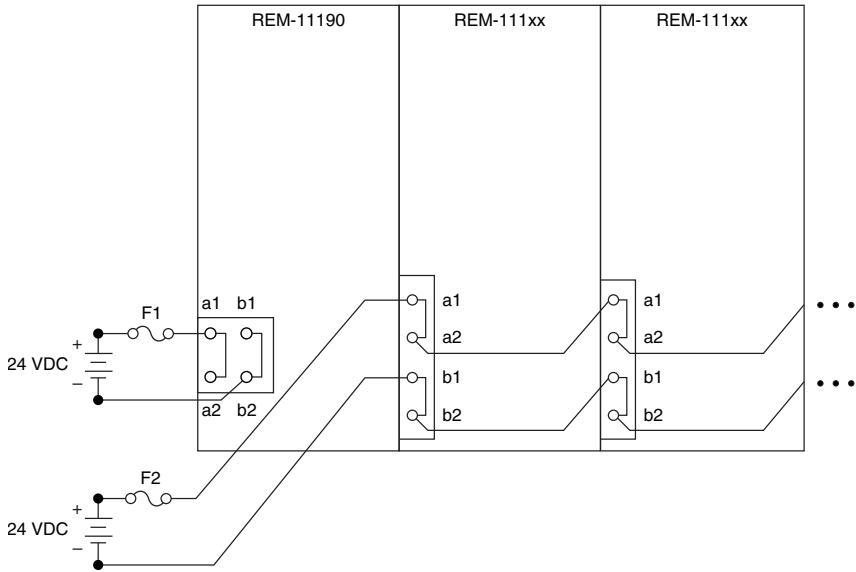

The supply terminals blocks contain internal jumpers. You can use the first connection for supply and the second connection to forward a potential to the next module.



**Caution** Connect an 8 A external fuse to the 24 V  $U_L$  supply to protect against polarity reversal. The power supply must provide four times the nominal current of the external fuse. This rating ensures that the fuse trips in the event of an error.

## Connection Guidelines

- Make sure that devices you connect to the REM-11190 are compatible with the module specifications.
- Push the wire into the terminal when using a solid wire or a stranded wire with a ferrule.
- Open the terminal by pressing a screwdriver into the spring lever when using a stranded wire without a ferrule.

 


# Removing Components

---

## Removing Spring Terminal Blocks

Complete the following steps to remove a spring-terminal block from the REM-11190.

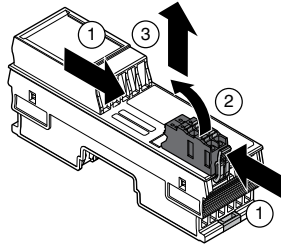

1. Press the locking latch to release the spring-terminal block.
2. Tilt the block toward the center of the module.
3. Remove the connector from the module.

## Removing the REM-11190

 
Remove all connections before removing the REM-11190, either by disconnecting the cables or removing the spring-terminal block.

### What to Use

- Flathead Screwdriver

### What to Do

Complete the following steps to remove the REM-11190 from the DIN rail.

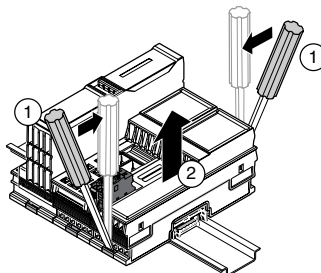

1. Insert the screwdriver and loosen the base latches on either end of the module.
2. Remove REM-11190 perpendicular to the DIN rail.



**Caution** Tilting the module when removing it from the DIN rail will damage the contacts.

## Removing Bus Connectors

Complete the following steps to remove bus connectors from the DIN rail.

 
### What to Use

- Flathead Screwdriver

### What to Do



**Note** You must remove the preceding module before removing the bus connector.

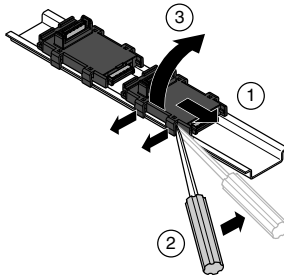


1. Slide the bus connector away from the preceding bus connector at least 5.0 mm (0.20 in.).
2. Insert the screwdriver and loosen both latches on one side of the DIN rail.
3. Rotate the bus connector to remove it from the DIN rail.



**Note** If you want to remove a bus connector in the middle of the system, you must remove any modules or bus connectors following the desired connector or slide them along the DIN rail at least 15.0 mm (0.60 in.).

# Where to Go Next

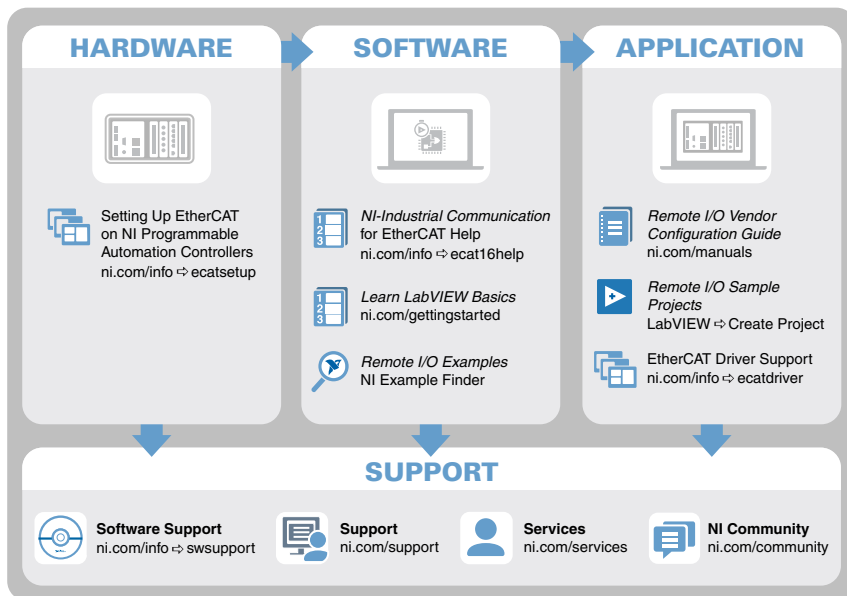 

## Worldwide Support and Services

The NI website is your complete resource for technical support. At [ni.com/support](http://ni.com/support), you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit [ni.com/services](http://ni.com/services) for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit [ni.com/register](http://ni.com/register) to register your NI product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

A Declaration of Conformity (DoC) is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting [ni.com/certification](http://ni.com/certification). If your product supports calibration, you can obtain the calibration certificate for your product at [ni.com/calibration](http://ni.com/calibration).

NI corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. NI also has offices located around the world. For telephone support in the United States, create your service request at [ni.com/support](http://ni.com/support) or dial 1 866 ASK MYNI (275 6964). For

telephone support outside the United States, visit the *Worldwide Offices* section of [ni.com/niglobal](http://ni.com/niglobal) to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Refer to the *NI Trademarks and Logo Guidelines* at [ni.com/trademarks](http://ni.com/trademarks) for information on NI trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering NI products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at [ni.com/patents](http://ni.com/patents). You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at [ni.com/legal/export-compliance](http://ni.com/legal/export-compliance) for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2016 National Instruments. All rights reserved.

376552A-01 Oct16