Contact: 866-275-6964

support@ni.com



Manufacturer: National Instruments

**Board Assembly Part Numbers** (Refer to Procedure 1 for identification procedure):

Part Number and Revision	Description
198848B-01L or later	NI 9219 Universal AI
198848B-04L or later	NI 9219 Universal AI, Conformal Coated
198848G-03L or later	NI 9219E Universal AI, Board Only
198848G-06L or later	NI 9219 Universal AI, Spring Terminal

## **Volatile Memory**

Target Data	Туре	Size	Battery Backup	User <sup>1</sup> Accessible	System Accessible	Sanitization Procedure
Module operation	MCU	Silicon Labs	No	No	Yes	Cycle Power
	RAM	C8051F315 (x4)				

# Non-Volatile Memory (incl. Media Storage)

Target Data	Туре	Size	Battery Backup	User Accessible	System Accessible	Sanitization Procedure
Device Configuration	EEPROM	2 KB	No			
<ul> <li>Calibration metadata</li> </ul>				Yes	Yes	Procedure 2
<ul> <li>Calibration data<sup>2</sup></li> </ul>				No	Yes	None
<ul> <li>Device information</li> </ul>				No	Yes	None
Module operation	CPLD	Lattice	No	No	No	None
•		LCMXO640E				
Module operation	MCU	Silicon Labs	No	No	No	None
_	FLASH	C8051F315				
		(x4)				

<sup>&</sup>lt;sup>1</sup> Refer to Terms and Definitions section for clarification of User and System Accessible

<sup>&</sup>lt;sup>2</sup> Calibration constants that are stored on the device include information for the device's full operating range. Any implications resulting from partial self-calibration can be eliminated by running the full self-calibration procedure.

Contact: 866-275-6964

support@ni.com



### **Procedures**

#### **Procedure 1 – Board Assembly Part Number Identification:**

To determine the Board Assembly Part Number and Revision, refer to the label applied to the bottom surface of the module. The Board Assembly Part Number should be formatted as "198848a-xxL" where "a" is the letter revision of the assembly (e.g. A, B, C, ...) and "xx" describes the product version.

#### **Procedure 2 - Calibration data:**

The user-accessible areas of the Device Configuration EEPROM can be cleared using the NI DAQmx API. For instructions on how to clear these areas, go to ni.com/info and enter info code *DAQmxLOV*.

Contact: 866-275-6964

support@ni.com



#### **Terms and Definitions**

#### **Cycle Power:**

The process of completely removing power from the device and its components and allowing for adequate discharge. This process includes a complete shutdown of the PC and/or chassis containing the device; a reboot is not sufficient for the completion of this process.

#### **Volatile Memory:**

Requires power to maintain the stored information. When power is removed from this memory, its contents are lost. This type of memory typically contains application specific data such as capture waveforms.

### **Non-Volatile Memory:**

Power is not required to maintain the stored information. Device retains its contents when power is removed. This type of memory typically contains information necessary to boot, configure, or calibrate the product or may include device power up states.

#### **User Accessible:**

The component is read and/or write addressable such that a user can store arbitrary information to the component from the host using a publicly distributed NI tool, such as a Driver API, the System Configuration API, or MAX.

#### **System Accessible:**

The component is read and/or write addressable from the host without the need to physically alter the product.

#### **Clearing:**

Per NIST Special Publication 800-88 Revision 1, "clearing" is a logical technique to sanitize data in all User Accessible storage locations for protection against simple non-invasive data recovery techniques using the same interface available to the user; typically applied through the standard read and write commands to the storage device.

#### **Sanitization:**

Per NIST Special Publication 800-88 Revision 1, "sanitization" is a process to render access to "Target Data" on the media infeasible for a given level of effort. In this document, clearing is the degree of sanitization described.