

INSTALLATION GUIDE

NI PXI-1031 Handle/Feet Kit

To install the kit, complete the following steps.

1. Remove COA label plate (as required).
2. Install the four rubber feet using four M4 shoulder screws.
3. Install the handle as shown using four M3 × 10 panhead screws.



Note You can install the handle/feet kit on either side of the chassis.

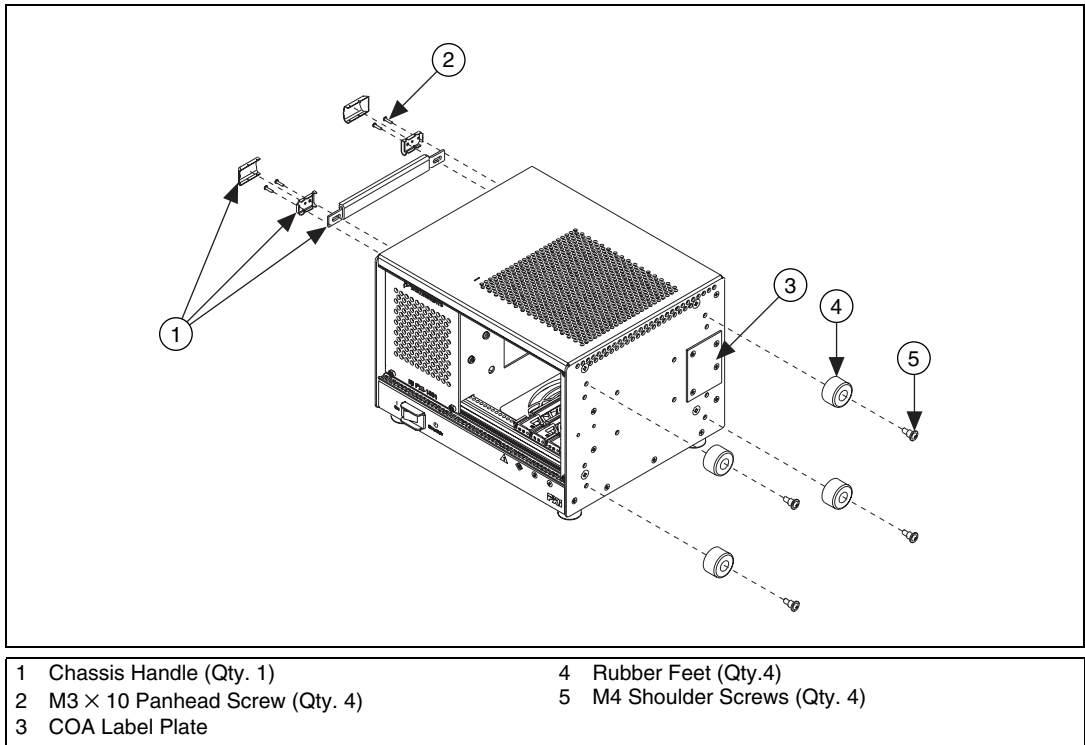


Figure 1. NI PXI-1031 with Optional Handle/Feet Kit

National Instruments™, NI™, and ni.com™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help» Patents** in your software, the `patents.txt` file on your CD, or ni.com/patents.

© 2004 National Instruments Corp. All rights reserved.



370995A-01

Feb04